


2.4G Remote Control User's Guide

ROBOCAN Downlight

Applicable model: DLRC28xx90xx6xx (xx: dynamic codes)

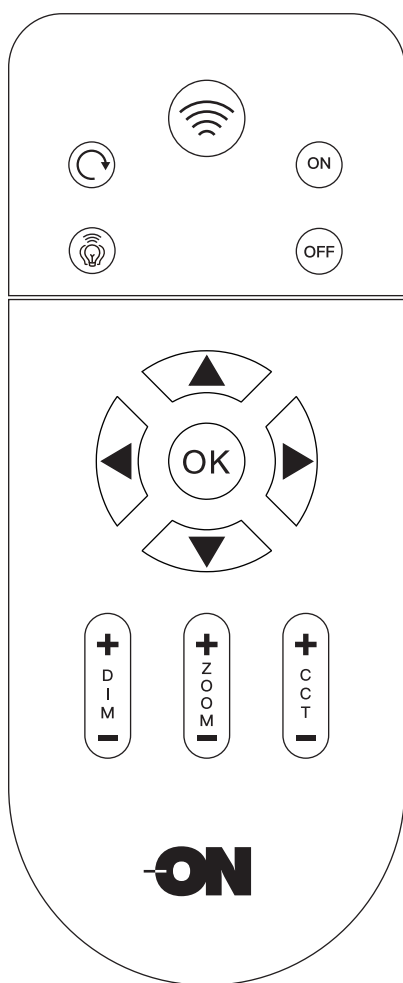

Note:

*The remote control uses a storage battery which can be connected to a Micro-USB for charging.

*The remote control can remain on stand-by for 4 weeks when fully charged.

*Red light flashing : not paired.

*Red light : locked.

*Green light : activate.

| | |
|---|--|
| | <p>Turn on / Pairing</p> <p>When the luminaire has not been paired, the red light in the received area will flash and "beep" will sound. Hold the button down for at least 3s, luminaire will flash 3 times when pairing is complete.</p> <p>Received area</p> |
| | <p>Turn off</p> |
| | <p>Activate / Control single luminaire</p> <p>After pairing, press and hold down button and aim the IR beam at the receiving area of the luminaire. Activation is complete when the indicator changes from red to green and a "beep" sounds. You can use the remote control to control the luminaire. NB: The luminaire will lock / inactivate automatically after 5 mins of inactivity.</p> |
| + | <p>Activate / Control multiple luminaires</p> <p>Press and hold + buttons simultaneously until the indicator changes from red to green.</p> |
| | <p>Inactivate / Lock luminaire</p> <p>Press twice to deactivate / lock the luminaire.</p> <p>Turn on/ off indicator</p> <p>Hold the button down for 3s, the indicator will turn on / off.</p> |
| | <p>Reset</p> <p>Press the button in activated (green light) status and turn off the luminaire for 3s to return the luminaire to default setting.</p> |
| | <p>Vertical movement / Tilt</p> |
| | <p>Horizontal movement / Pan</p> |
| | <p>Increase brightness</p> <p>Decrease brightness</p> |
| | <p>Wide angle</p> <p>Narrow angle</p> |
| | <p>Increase color temperature</p> <p>Decrease color temperature</p> |